

THANK YOU FOR YOUR PURCHASE

Available on App Store and Play Store

iOS



Android



www.roversystems.com.ph/user-manuals



Rover 1000 Home eMobile

Quick Guide for Android and iOS

NOTES:
Before supplying power to the camera, please read this User Guide in detail.

Do not attempt to disassemble the camera. If the camera is not working, please contact your local supplier



OPERATIONS

1. Download Application

Download Rover 1000 Home eMobile Application on App Store for iOS and Play Store for Android user.

2. Power on the Device


Insert Micro SD Card then Power on

3. User Login

Open the mobile application installed in your mobile phone. If you don't have an account, please register first.

4. Camera Configuration

Click "+" to add device.

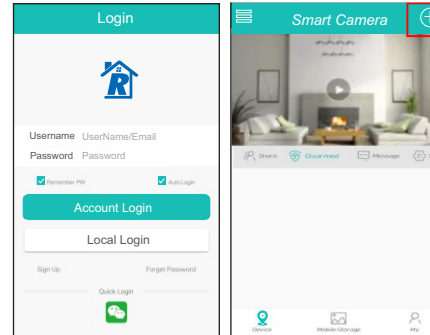


Note:
For Temporary User
You don't need to register if you choose **Local Login**. This login mode does not support alarm push notification.
For Cloud Login
Please connect your mobile phone to the Internet first. procedure 2a-2d cannot be done without Internet/Data Connection.

Ways to Connect Camera

1. Local Viewing without Internet Connection




1a. Adding a Device in AP Mode - can connect directly without WLAN, LAN, and Internet connection. (Not applicable to RHDC5A1XEOT / RHDA2E1XEIN)

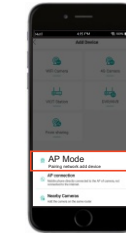

Connect directly to the camera without Internet



Press the reset button of the device 3 times to switch to AP Mode. Then Click "AP Mode"

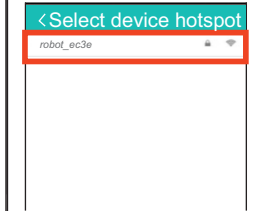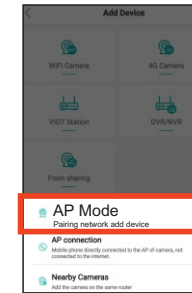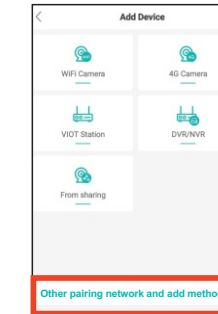

Select the Device SSID
After hearing the camera voice prompt "Connect Successfully" You can now view the device.
Note: To increase security please see page 19 to set camera password.

2. Remote viewing using Internet and Data Connection

2a. Adding a Device in AP Mode and connect to Router


when in AP Mode, the Internet, LAN, WLAN becomes available (Not applicable to RHDC5A1XEOT / RHDA2E1XEIN)




Connect the Camera to AP Mode



From AP Mode



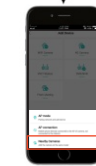


Connect the Camera to Router 1

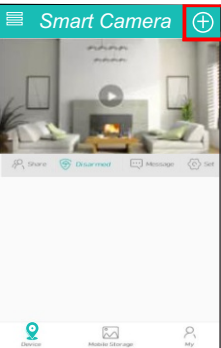


You need to connect to AP Mode first to connect it to the router. Click "+" to add device

Then click "Other pairing network and adding method" & "AP Mode"

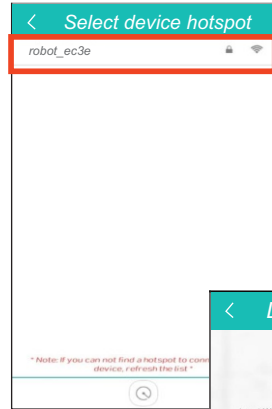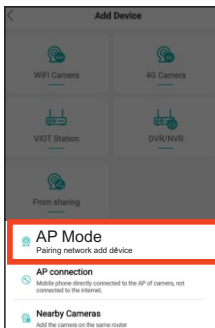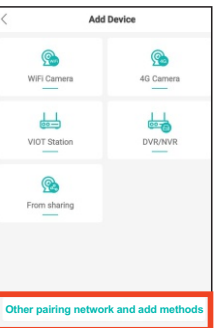

Select the device you wish to add to the Router

Choose the stronger Wi-Fi signal, input Wi-Fi password and click "Confirm"

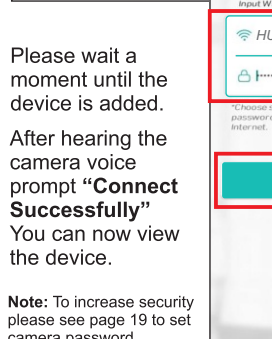


Please wait a moment until the device is added.


After hearing the camera voice prompt "Connect Successfully" You can now view the device.

Note: To increase security please see page 19 to set camera password.



2b. Adding a Device directly to the Router - when WLAN and LAN is available without using AP Mode.

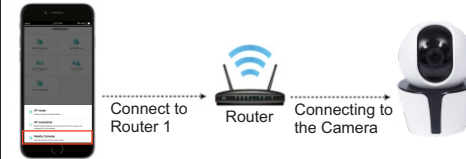


Press reset button for 6 seconds to restore factory settings. After hearing a voice prompt "Restore Factory Settings", wait a few seconds, you'll hear a voice prompt "Waiting to be configured". Open Mobile Application and Click "+" to add Device

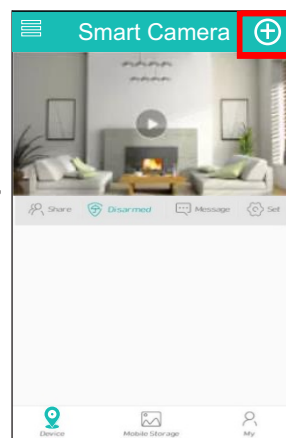

Then click "Other pairing network and adding method" & "Nearby Cameras"

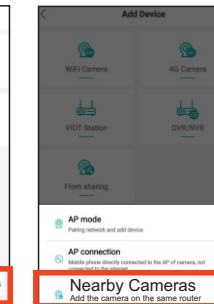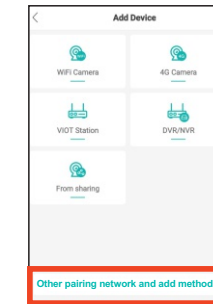


Click "Next Step"

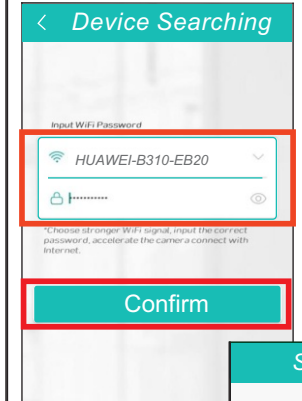

Connect to your desired Router, input password then Click "Confirm"

Please wait a moment until the device is found.

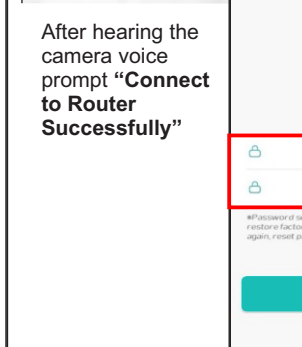

After hearing the camera voice prompt "Connect to Router Successfully"

You can now view the device.

Note: To increase security please see page 19 to set camera password.

For Additional User/Mobile Phone Connection
2c. Adding a Device to the same WLAN - when the camera and mobile phone is connected to the same network.

User 1 connected to Router 1

User 2 connected to Router 1

Camera connected to Router 1

* Specifications are subject to change without prior notice. Home Camera Series | Page 11

Open the mobile application and Click “+” to add Device.

You can now view the device.

You can now view the device.

Then click “Other pairing network and adding method” & “Nearby Cameras”

Other pairing network and add methods

Nearby Cameras

* Specifications are subject to change without prior notice. Home Camera Series | Page 12

Wait for a moment until the device is found. Then select the device you want to add.

You can now view the device.

Note: To increase security please see page 19 to set camera password.

* Specifications are subject to change without prior notice. Home Camera Series | Page 13

2d. Add Shared Camera - when the camera and mobile phone is connected to different network.

Camera connected to Router

User 1 connected to Router

Router 1

Internet

User 2 connected to internet

* Specifications are subject to change without prior notice. Home Camera Series | Page 14

Open the mobile application and Click “+” to add Device.

Then click “Other pairing network and adding method” & “Nearby Cameras”

Other pairing network and add methods

Nearby Cameras

* Specifications are subject to change without prior notice. Home Camera Series | Page 15

Input serial number or scan QR code of the device, then click “Save”

You can now view the device.

Scan Device QR Code

Note: To increase security please see page 19 to set camera password.

* Specifications are subject to change without prior notice. Home Camera Series | Page 16

3. Wired Connection
3a. Adding Cameras through LAN Cable – can connect directly using LAN (Applicable to RHVC2D3X1D, RHOC2D2XB2, RHUC5A2XDL / RHUF5A2XDL, RHZC2D3S1, RHW2D2S1)

Camera connected directly to the Router using LAN

Connect to Router 1

Router 1

Then click “Other pairing network and adding method” & “Nearby Cameras”

Other pairing network and add methods

Nearby Cameras

Press the reset button of the device for 6 seconds to restore factory settings. After hearing a voice prompt “Restore Factory Settings”. Connect LAN Cable to the camera LAN port and Router LAN port.

* Specifications are subject to change without prior notice. Home Camera Series | Page 17

Open the mobile application and Click “+” to add Device.

Then click “Other pairing network and adding method” & “Nearby Cameras”

Other pairing network and add methods

Nearby Cameras

* Specifications are subject to change without prior notice. Home Camera Series | Page 18

Wait for a moment until the device is found. Then select the device you want to add.

You can now view the device.

4. Set Password
If password has not been set
 To increase your security, please don't forget to set the password of the device. Click the icon at the upper right of the Device you added recently.

* Specifications are subject to change without prior notice. Home Camera Series | Page 19

Click “Password Management”

Settings

- Basic Setting
- Password Management
- Motion Alarm
- Storage Management
- Record Settings
- General

The device has no default password, please leave the “Original Password” blank and set New Password for the device and click “Save”

Set Password

- Original Password
- New Password
- Save

* Specifications are subject to change without prior notice. Home Camera Series | Page 20