




HANDS-FREE TWO-WAY AUDIO COMMUNICATION, ONE CABLE SYSTEM WITH INDEPENDENT VOLUME ADJUSTMENT METAL CASING, DC12V 300MA  
**RIWE361D**



### FEATURES

- Hands-free two-way full-duplex communication;
- Full metal jacket, elegance, aesthetic;
- Microcomputer control circuit with squelch function;
- Can thoroughly solve echo and squeal problems;
- Adopts high-powered elegant microphone;
- Clear volume of Master Station and Substation, can be controlled separately;
- Easy installation;
- Only one cable connecting Master Station and Substation;

### INTERFACE

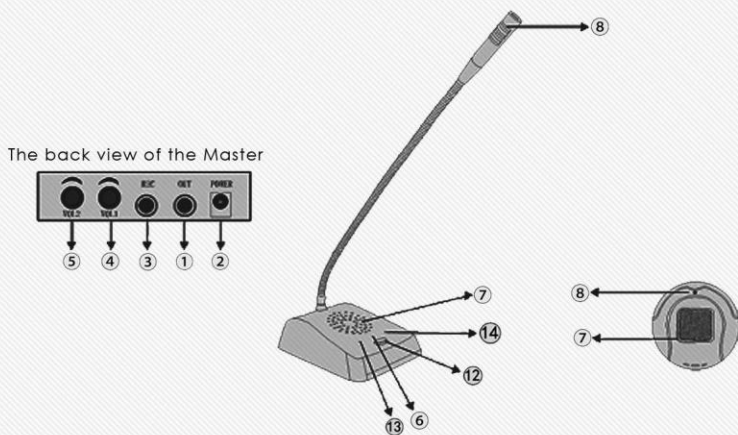

- ① Jack For Extension
- ② Jack For Power
- ③ Jack For Recording
- ④ Extension Volume Knob
- ⑤ Master Volume Knob
- ⑥ Power Indicator
- ⑦ Loudspeaker
- ⑧ Microphone
- ⑫ Power/Mute Switch
- ⑬ Extension voice indicator
- ⑭ Master station voice indicator

### SPECIFICATIONS

MODEL	RIWE361D
Working Voltage	DC12V
Working Current	300mA
Working Temperature	-10°C~60°C
Master Station Dimensions	130mm x 110mm x 38mm
Substation Dimensions	Φ70mm x 18mm

Disclaimer: Design & specifications subject to change without prior notice.

### INSTALLATION AND OPERATION PROCEDURES

1. Install the Master Station inside the working room and install the Substation outside of the working room. Insert the Substation connector to the socket ①.
2. Plug the DC12V power adaptor to a 220V power source and insert DC12V male plug into the Power jack ②. if the power LED ⑥ is ON, the unit is in normal working status.
3. The Systems applies full duplex for technology. ④ is the volume control for Substation, and ⑤ is the volume control for Master Station. Adjust the volumes accordingly depending on the working room environment.
4. Power on/off: Long Press the Power /Mute Switch ⑫ on the Master Station for 2 seconds. When red indicator is off means power off. When red indicator is on means the device is on.
5. Mute function: Under the power on state, press the Power/ Mute Switch ⑫. Intercom resumes when red indicator stops flashing.
6. If you need to record the audio from in and out of the working room, the signal will output from the Record jack ③. The signal amplitude is 1.2Vpp.
7. Turn the volume control of Master Station (Substation) lower and adjust the volume control of Substation (Master Station) higher if the Substation (Master Station) experiences echo and squeal problems when speaking at the Master Station (Substation).